


D Montageanleitung GB Assembly instructions NL Handleiding voor de montage PL Instrukcja montażu HU Szerelési útmutató RO Instrucții de montaj
 FR Notice de montage IT Istruzioni di montaggio CZ Montážní návod SK Návod na montáž TR Montaj talimatı RU Инструкция по монтажу

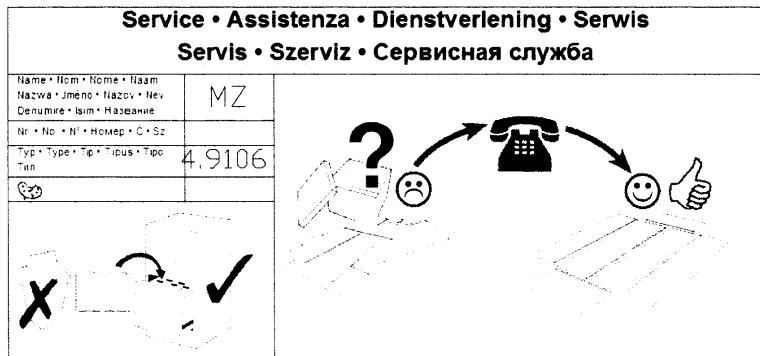

A5	0mm	4x
B1		4x
r10	LI	1x
r11	RE	1x
s6	4x27	4x
v		2x

1. ASL 400x370x15mm 1
 1a. ASR 400x370x15mm 1
 3. ZB 768x354x15mm 2
 5. TR 396x396x15mm 2
 6. RW 780x399x3mm 1

A5	0mm	4x	r5	2x
B1		4x	r10 LI	1x
l		8x	r11 RE	1x
l1		8x	s6 4x27	8x
r4	8x40	2x	v	2x
			Z	20x

